
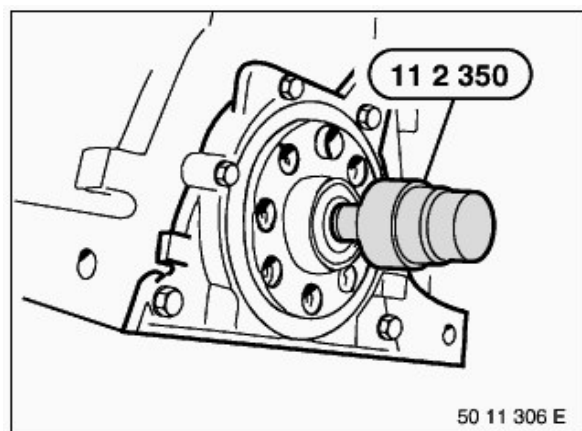


(clutch removed)

Remove thrust bearing with special tool 11 2 340.

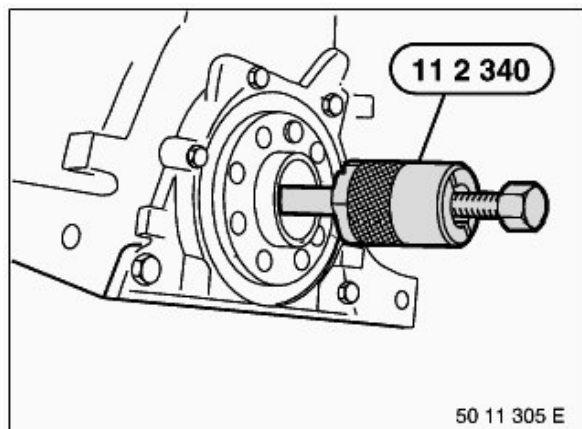

Install new thrust bearing and drive firmly home with special tool 11 2 350 in conjunction with special tool 00 5 500.