

Remove wheel,
refer to 36 10 300.

Disconnect handbrake cable from handbrake lever,
refer to 34 41 120.


Remove coil spring,
refer to 33 53 000.

Disconnect ABS pulse generator.

If necessary, unplug brake pad wear indicator.

If necessary, unscrew stabilizer on trailing arm.


Install pedal support and actuate brake pedal. This prevents
brake fluid from escaping from the brake system when the
brake line is disconnected.

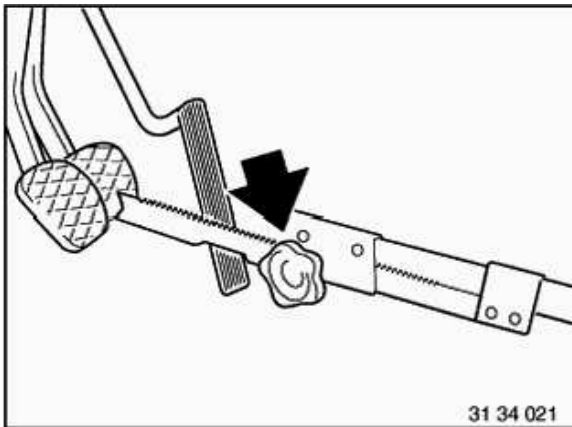

Disconnect left and right brake pipes.

Installation:

Tightening Torque,
refer to Technical Data 34 32 1AZ.
After assembly, bleed brake system,
refer to 34 00 047.

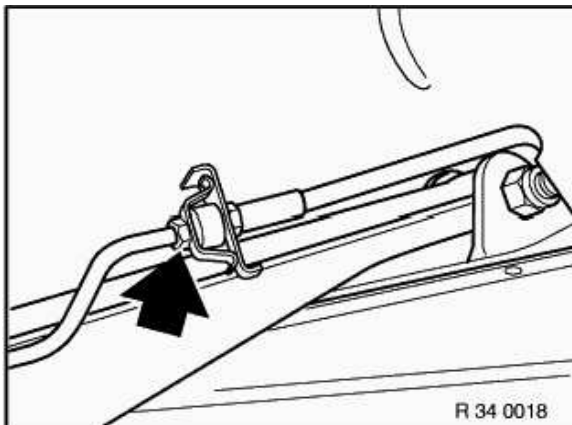

Support trailing arm.

Unfasten screws and pull trailing arm out.

Installation:

Replace self-locking nuts.
Tightening Torque,
refer to Technical Data 33 32 1AZ

