
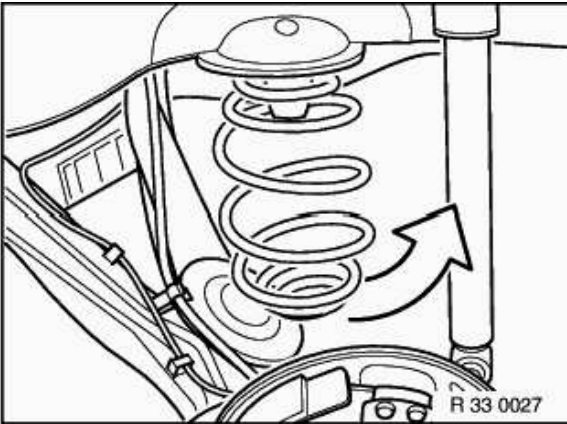


Removing output shaft from final drive,
refer to 33 21 000.

If necessary, unscrew stabilizer on trailing arm.

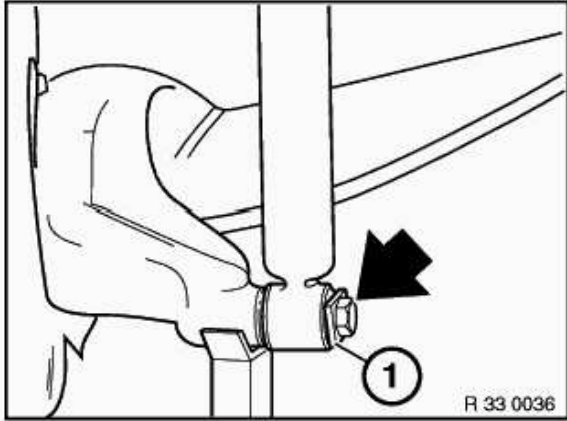

Support trailing arm.

Unscrew screw.

Installation:

Use washer (1).

Tightening Torque,

refer to Technical Data 33 52 1AZ

Lower trailing arm and take off barrel spring.

Installation:

Check coil spring for surface damage and spring mounts,
replace if necessary.

Only refit coil springs with identical BMW number.

Note:

On the "rough-road package" version, the spring pad top is
22.0 mm thick.