


Observe instructions for electrohydraulic convertible top
(electrohydraulic/
semi-automatic),

refer to 54 34 ...


Removing and installing rear left lower section of side
trim,

refer to 51 43 015

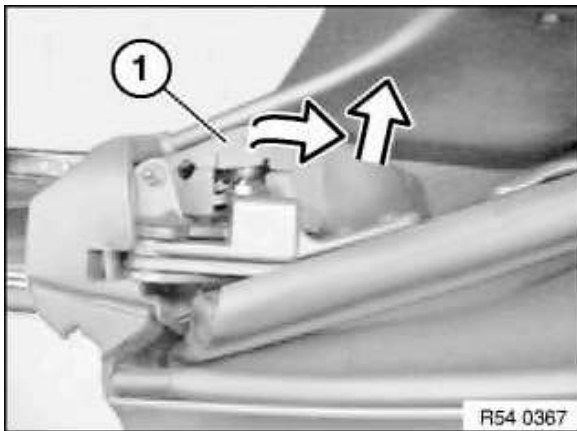

Open convertible top.


Lift finisher (1) off main bearing threading toward the rear and
pull out upward.

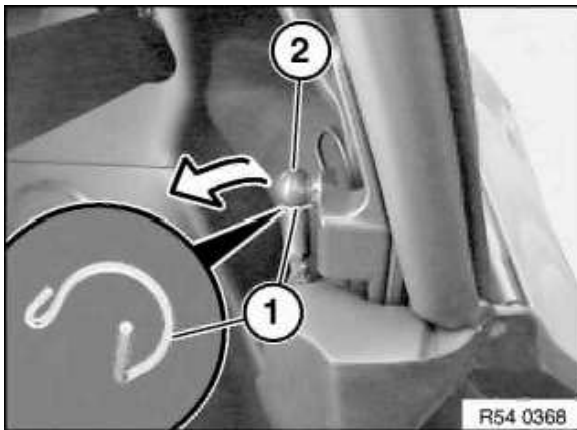

Close convertible top (do not lock).


Release retaining clip (1) and pull off downward.

Clip out hydraulic cylinder (2) inward with special
tool 00 9 319.

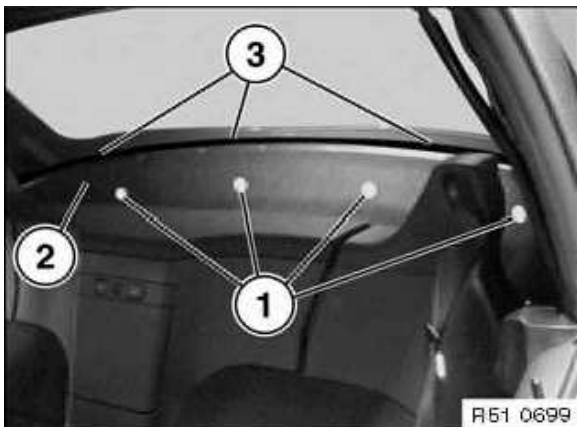

Partially unfasten clips (1) and remove convertible-top
compartment interior trim paneling (2) downward out of
bracket (3) in area of hydraulic cylinder.


Unfasten lines on hydraulic control unit,
refer to 54 34 005

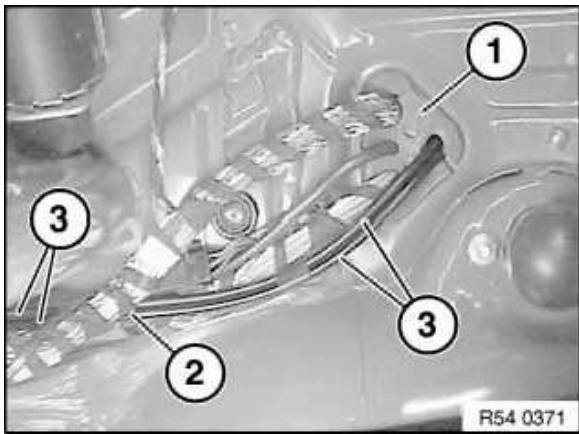

From convertible top compartment:
Lift out cable grommet (1). Open cable connector (2).

Installation:


Ensure proper routing of hoses (3).

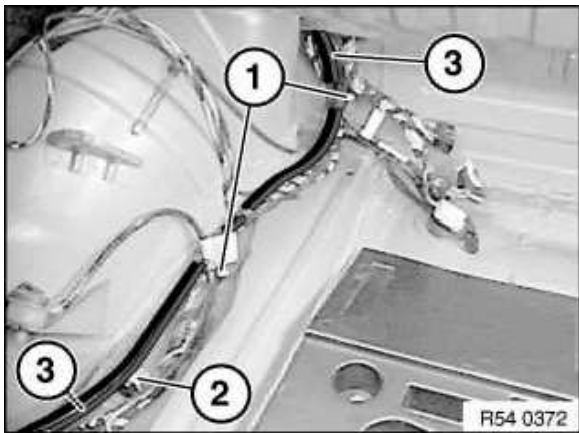

From trunk:
Open cable connector (1).
Unclip clip (2).

Installation:


Ensure proper routing of hoses (3).

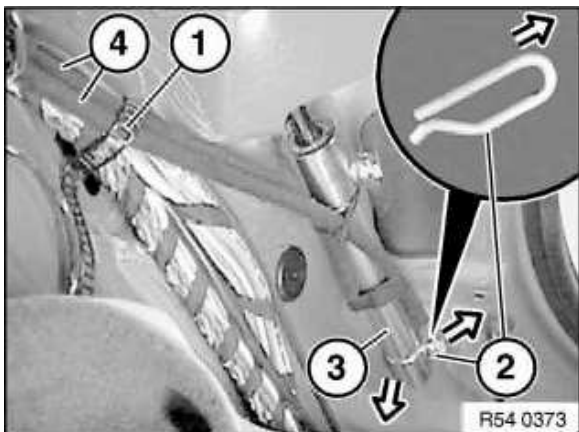

From vehicle interior:
Open cable ties (1) and pull retainer (2) into front detent position.
Unclip hydraulic cylinder (3) with special tool 00 9 319.
Remove hydraulic cylinder with hoses (4).

Installation:

Check function.

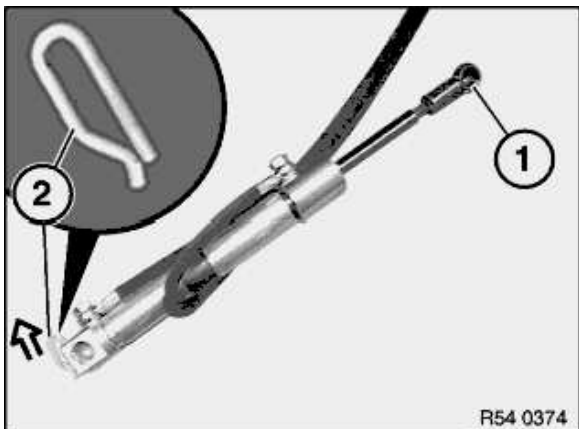

Only replace:
Before installing the hydraulic cylinder, unfasten top retainer (1) and pull bottom retainer (2) into front detent position.