




Unclip button cover.



Unfasten lock nut and twist button to remove.



Press together retaining clips with special tool 61 3 100 and slide backwards to remove.

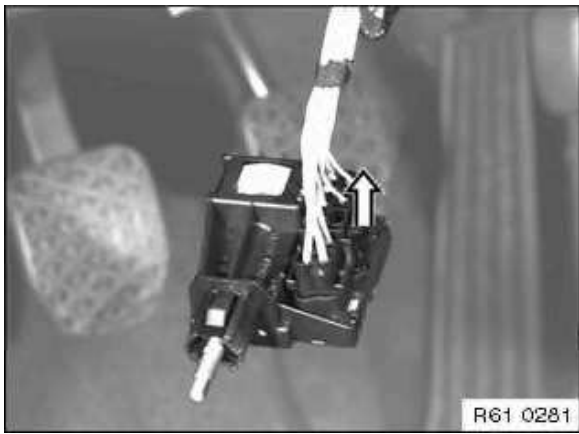

Pull off connectors.