


118MAX, 118MAXH Air Hammer - Exploded View

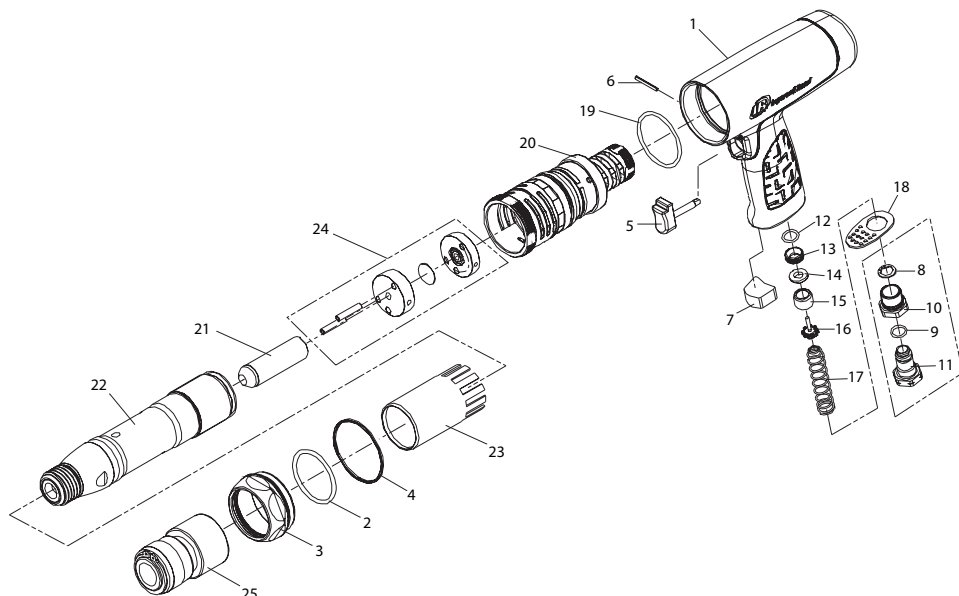


(Dwg. 47147046)

118MAX, 118MAXH Air Hammer - Parts List

Item	Part Description	Part Number	Item	Part Description	Part Number
1	Housing	122MAX-59	18	Deflector	122MAX-123
2	O - Ring	118MAX-65	19	O - Ring	122MAX-282
3	Front Cap	118MAX-27	20	Rear Cushion	122MAX-304
4	RED Gasket	122MAX-36	21	Main Piston	118MAX-20
5	Trigger Unit	122MAX-93	22	Cylinder	
6	Spring Pin	122MAX-121		for Model 118MAX	118MAX-6
7	Muffer	122MAX-311		for Model 118MAXH	118MAXH-6
	Air Inlet Assembly	529-565X	23	Dusty Cover	118MAX-23
8	Ex-concentric Ring	---	24	Valve Assembly	122MAX-4A
9	O - Ring	---		Valve Unit	---
10	Air Inlet	---		Valve Seal	---
11	Swivel Adapter	---		Valve Unit	---
12	O - Ring	122MAX-168		Spring Pin (2)	---
13	Insert Bushing	122MAX-303	25	Quick Change Retainer	9510
14	Seal	122MAX-210	*26	Specification Label	118MAX-300
15	Bushing	122MAX-503	*27	Warning label	122MAX-99
16	Tip Valve	122MAX-302	*28	Chisel Set	9500
17	Valve Spring	122MAX-51			

* Not Illustrated

122MAX, 122MAXH Air Hammer - Exploded View

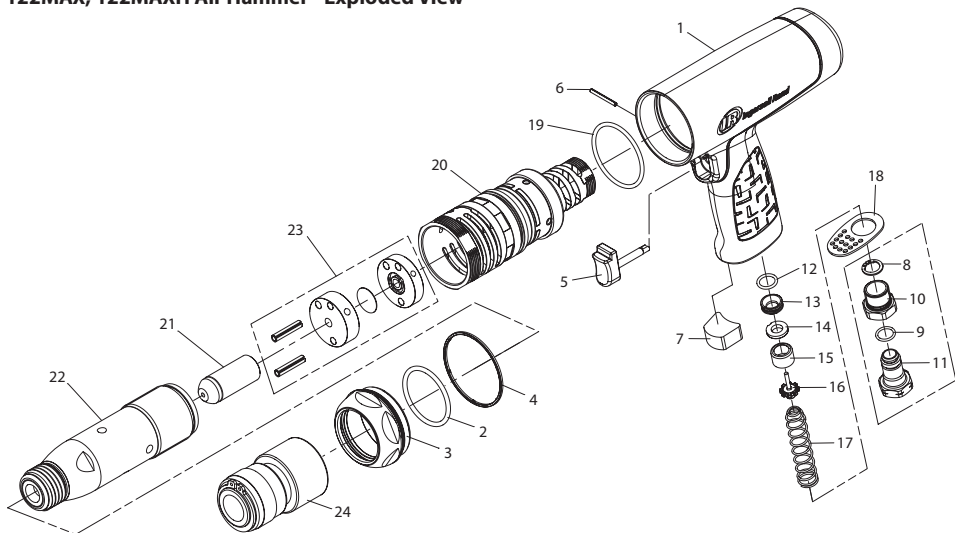

(Dwg. 47147053)

122MAX, 122MAXH Air Hammer - Parts List

Item	Part Description	Part Number	Item	Part Description	Part Number
1	Housing	122MAX-59	17	Valve Spring	122MAX-51
2	O - Ring	122MAX-65	18	Deflector	122MAX-123
3	Front Cap	122MAX-27	19	O - Ring	122MAX-282
4	RED Gasket	122MAX-36	20	Rear Cushion	122MAX-304
5	Trigger Unit	122MAX-93	21	Main Piston	122MAX-20
6	Spring Pin	122MAX-121	22	Cylinder	
7	Muffler	122MAX-311		for Model 122MAX	122MAX-6
	Air Inlet Assembly	529-565X		for Model 122MAXH	122MAXH-6
8	Ex-concentric Ring	---	23	Valve Assembly	122MAX-4A
9	O - Ring	---		Valve Unit	---
10	Air Inlet	---		Valve Seal	---
11	Swivel Adapter	---		Valve Unit	---
12	O - Ring	122MAX-168		Spring Pin (2)	---
13	Insert Bushing	122MAX-303	24	Quick Change Retainer	9510
14	Seal	122MAX-210	*25	Specification Label	122MAX-300
15	Bushing	122MAX-503	*26	Warning Label	122MAX-99
16	Tip Valve	122MAX-302	*27	Chisel Set	9500

* Not Illustrated

Parts and Maintenance

When the life of the tool has expired, it is recommended that the tool be disassembled, degreased and parts be separated by material so that they can be recycled.

Tool repair and maintenance should only be carried out by an authorized Service Center.

Refer all communications to the nearest **Ingersoll Rand** Office or Distributor.

Related Documentation

For additional information refer to:

Product Safety Information Manual 04581450.

Product Information Manual 46816427.

Manuals can be downloaded from ingersollrandproducts.com.



ingersollrandproducts.com
© 2013 Ingersoll-Rand

47125943
Edition 4
August 2013